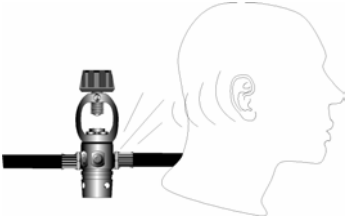
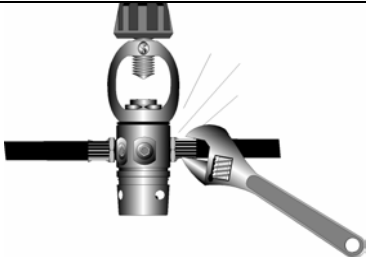
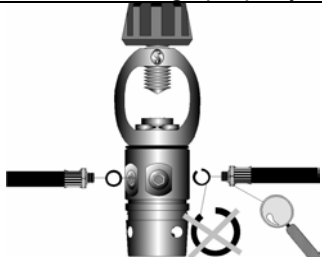

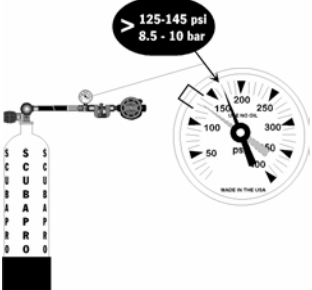
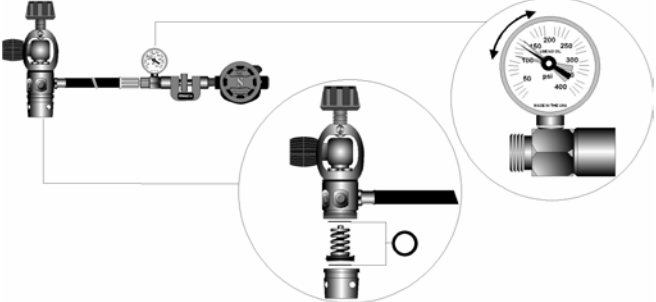


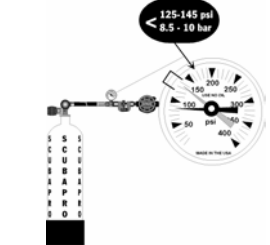
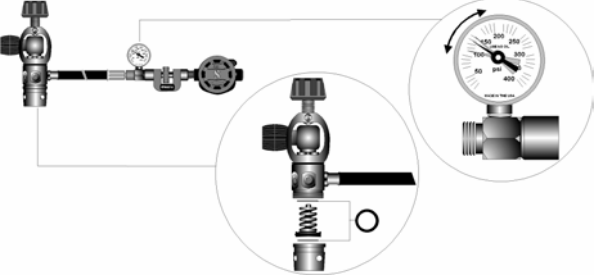




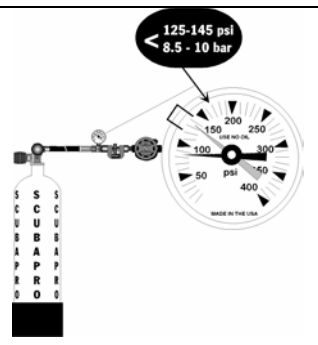
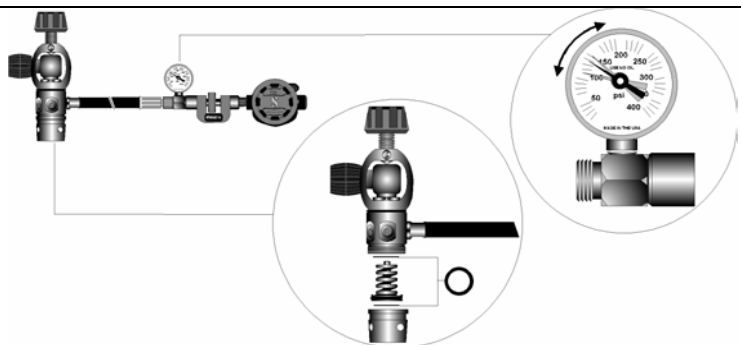


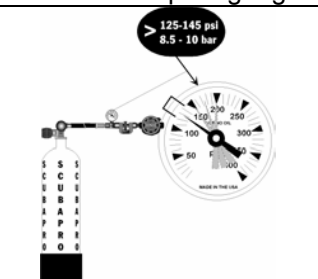
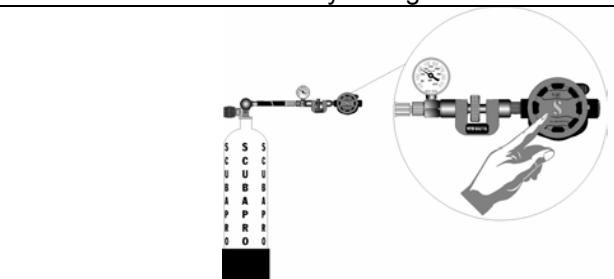
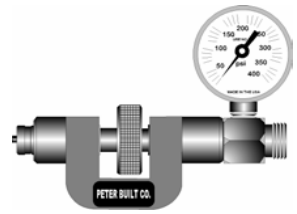
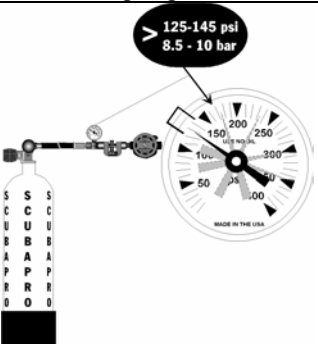
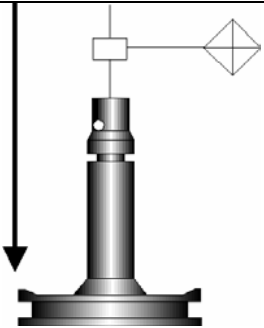
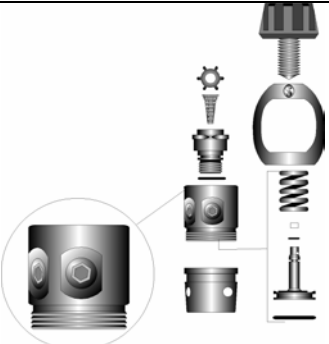



SCUBAPRO MK 2 PLUS First Stage Trouble Shooting Guide

| Symptom | Correction | | Tools Needed | | | |
|---|--|--|--|---|--|--|
| <p>Audible leak from ports or plugs</p>  | <p>Tighten ports and plugs</p>  | | <p>Replace damaged o'rings Seat all o'rings properly</p>  | | <p>Adjustable wrench</p>  | |
| <p>High IP (3000 psi supply)</p>  | <p>Adjust the number of shims (remove)</p>  | | <p>Universal Tool</p>  | <p>Pneumatic adjusting tool</p>  | | |
| <p>Low IP (3000 psi supply)</p>  | <p>Adjust the number of shims (add)</p>  | | <p>Universal Tool</p>  | <p>Pneumatic adjusting tool</p>  | | |



SCUBAPRO MK 2 PLUS First Stage Trouble Shooting Guide

| Symptom | Correction | Tools Needed | | |
|---|---|--|---|--|
| <p>Low IP (300 psi supply)</p>  | <p>Replace spring or shim</p>  | <p>Pneumatic adjusting tool</p>  | <p>Universal Tool</p>  | |
| <p>Initial IP creep on gauge</p>  | <p>New seat: Cycle regulator 20 – 25 times</p>  | <p>Pneumatic adjustment tool</p>  | | |
| <p>Continuous IP creep on gauge</p>  | <p>Replace seat</p>  | <p>Replace Body</p>  | <p>Various</p>  | |